



INSTALLATION INSTRUCTIONS

Accessory
RIGHT PANNIER CASE
P/N 08L81-MKK-D00
LEFT PANNIER CASE
P/N 08L86-MKK-D00


Application
CRF1000A/A2/D/D2

Publication No.
MII
Issue Date
December 2017

Honda Dealer: Please give a copy of these instructions to your customer.


PARTS LIST

<Right pannier case>

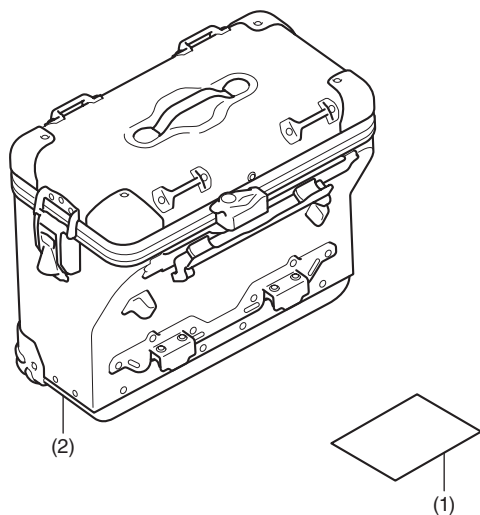


No.	Description	Qty
(1)	URL paper	1
(2)	Right pannier case	1

<Left pannier case>

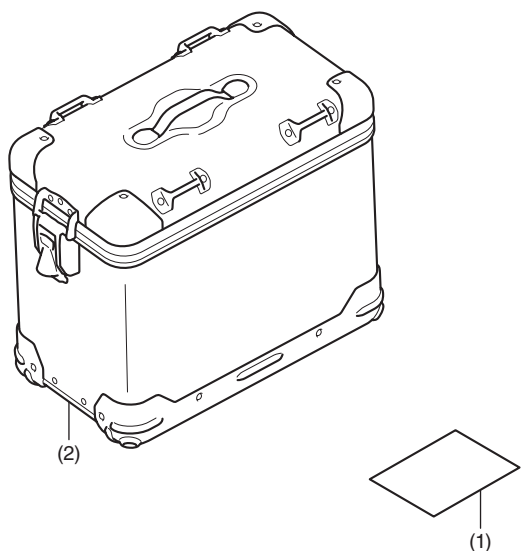

No.	Description	Qty
(1)	URL paper	1
(2)	Left pannier case	1

PANNIER STAY Sold separately

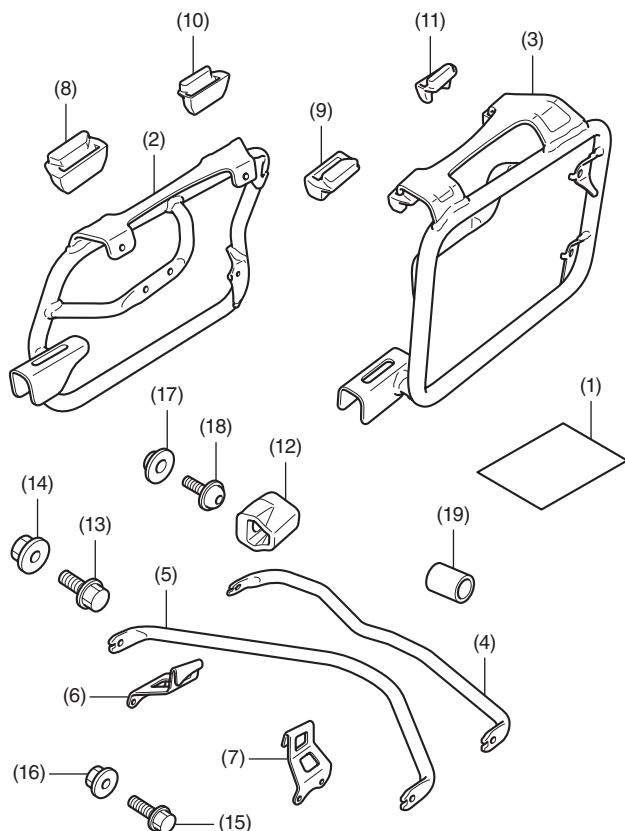


No.	Description	Qty
(1)	URL paper	1
(2)	Right pannier stay	1
(3)	Left pannier stay	1
(4)	Upper cross pipe	1
(5)	Lower cross pipe	1
(6)	Right stay	1
(7)	Left stay	1
(8)	Right front attachment	1
(9)	Left front attachment	1
(10)	Right rear attachment	1
(11)	Left rear attachment	1
(12)	Rubber	2
(13)	8 mm SH flange bolt	4
(14)	8 mm flange nut	4
(15)	6 mm SH flange bolt	4
(16)	6 mm flange nut	4
(17)	Collar	2
(18)	5 mm socket bolt	2
(19)	Tube	1

1 KEY INNER CYLINDER (Wave key type)

Sold separately

- Do not use the [] slots.

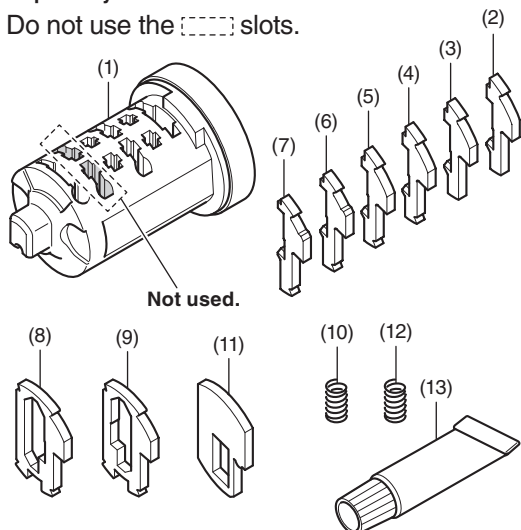

No.	Description	Qty
(1)	Inner cylinder	1
(2)	No.1 tumbler	6
(3)	No.2 tumbler	6
(4)	No.3 tumbler	6
(5)	No.4 tumbler	6
(6)	No.5 tumbler	6
(7)	No.6 tumbler	6
(8)	Sub-lock tumbler A	1
(9)	Sub-lock tumbler B	1
(10)	Spring (Silver)	13
(11)	Stopper tumbler	2
(12)	Stopper spring (Black)	2
(13)	Grease	1

MAXIMUM LOADING CAPACITY



- The weight of the cargo must not exceed the following maximum loading capacity:

Maximum Loading Capacity	
Right pannier case	10.0 kg (22.0 lb)
Left pannier case	10.0 kg (22.0 lb)


< Notes regarding the key cylinder >

- This product is used to assemble a key cylinder matching the motorcycle key by combining six types of tumblers.
- When this key cylinder is installed in a box or similar equipment, the installed equipment can be operated with the motorcycle key.


Combine six types of tumblers.

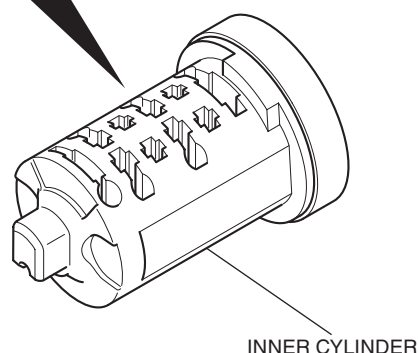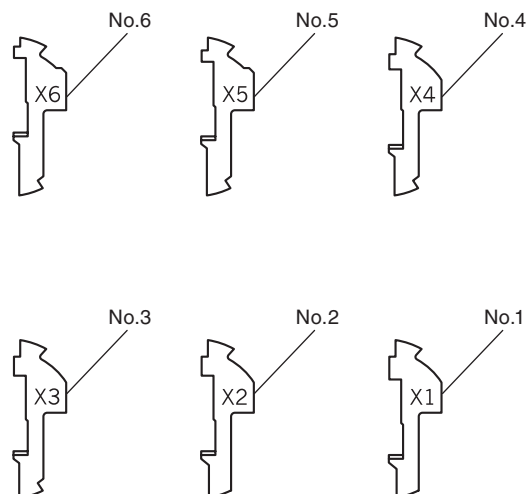


INSTALLATION

1. The two sub-lock tumbler types shown are provided.
 - The  part has a different slot for each of the two sub-lock tumbler types.
 - As the tumblers are small, keep them in the bag until they are used.

SUB-LOCK TUMBLER A

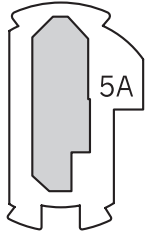


SUB-LOCK TUMBLER B

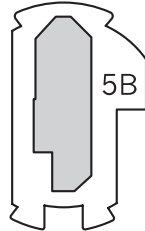

The stopper tumbler will be used later.

STOPPER TUMBLER



2. The six tumbler types shown are provided.
 - The  part has a different width for each of the six tumbler types.
 - As the tumblers are small, keep them in the bag until they are used.

No.6


No.5

No.4




No.3

No.2

No.1

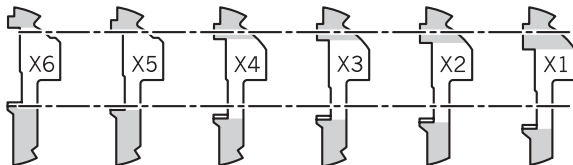


3. Install the tumblers and springs (silver) as shown.
- First install four No.1 tumblers.
 - Note the installed tumbler to below chart.

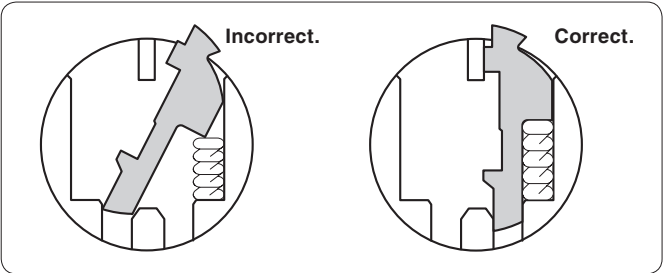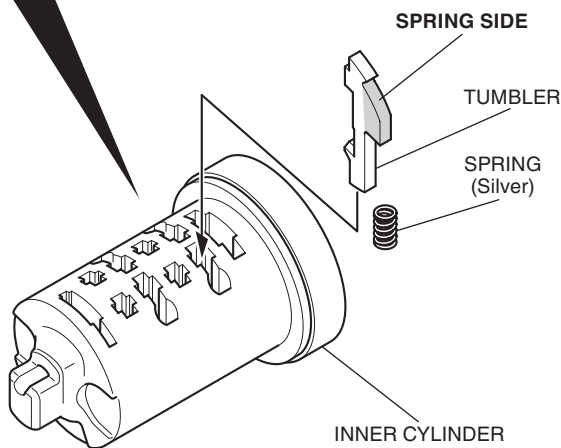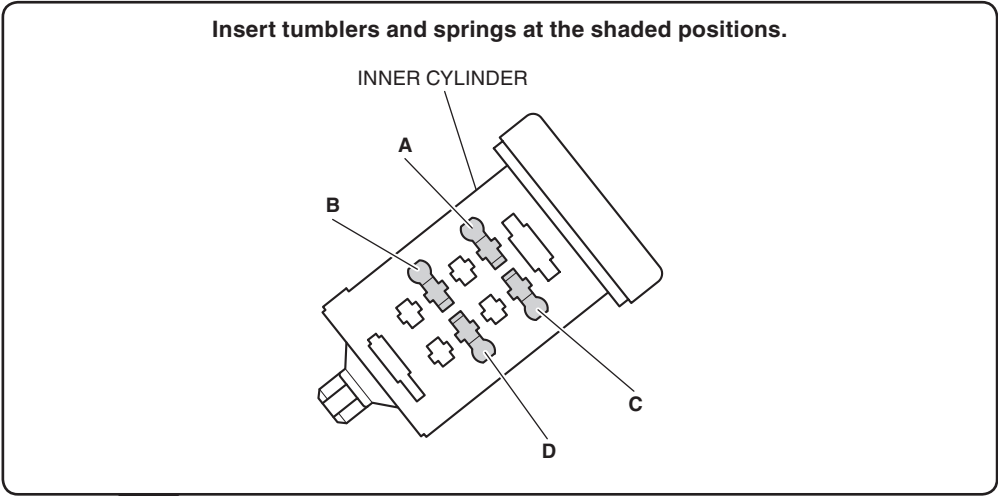


	Position A	Position B	Position C	Position D
No.1 tumbler				
No.2 tumbler				
No.3 tumbler				
No.4 tumbler				
No.5 tumbler				
No.6 tumbler				


4. Insert the key as shown.
- **Lightly press down on the tumblers from above, then insert the key.**

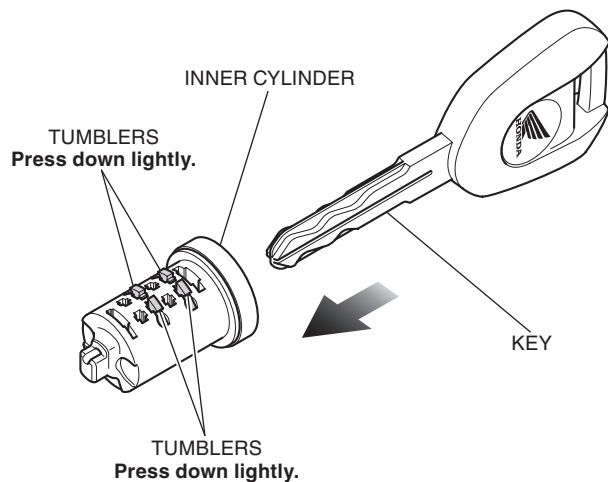


5. Confirm that some tumblers are projecting. Mark the positions of the projected tumblers.
- **The positions where tumblers project and the projecting height differ according to the key.**

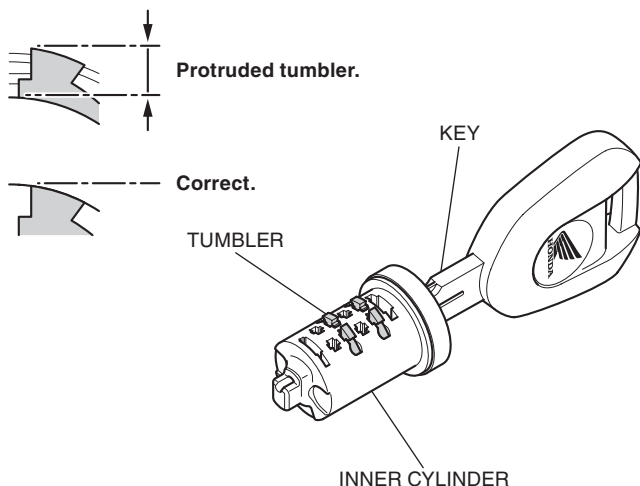


6. Press down lightly on the tumbler, pull the key out.
- **The tumbler spring may jump out when the tumbler is not pressed down lightly.**

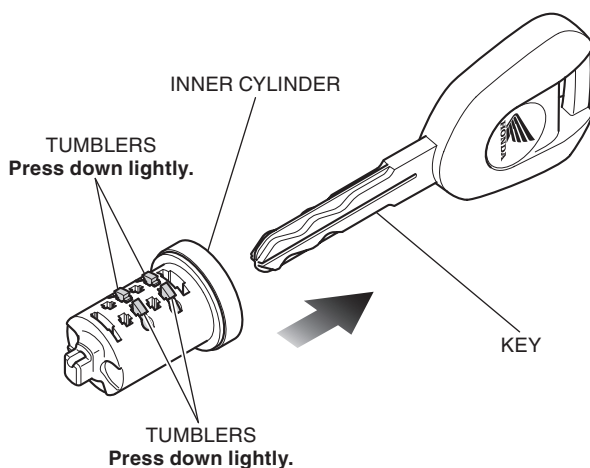


7. Pull out the projecting tumbler(s).
- **Leave the spring(s) installed.**

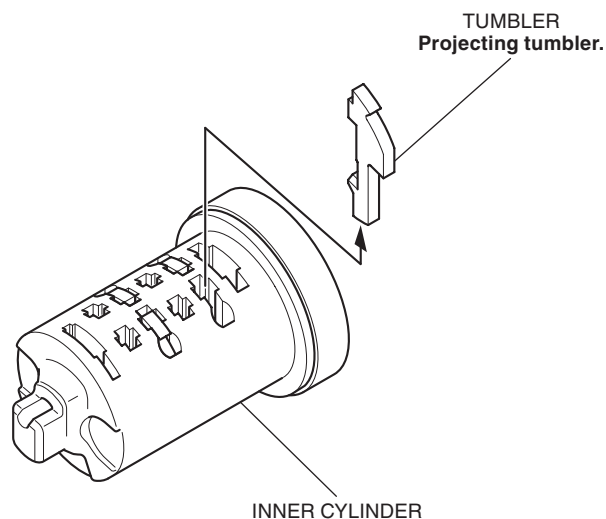

8. Insert a different tumbler(s) at the marked positions.
- **Use a tumbler of young number one stage.**


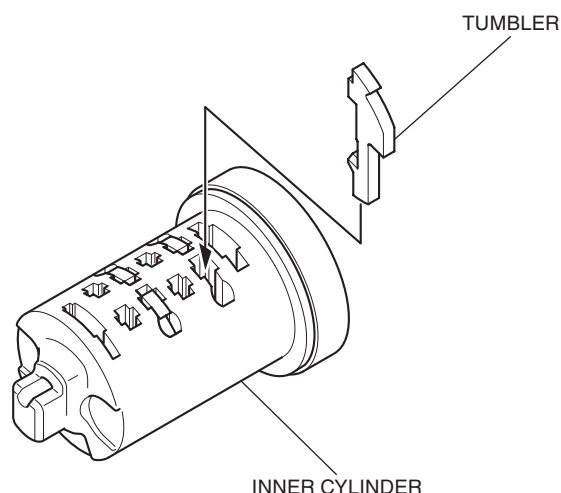


9. Repeat steps 4 to 8, inserting different tumblers at the marked positions until no tumblers are projected.
- **Lightly press down on the tumblers from above, then insert the key.**

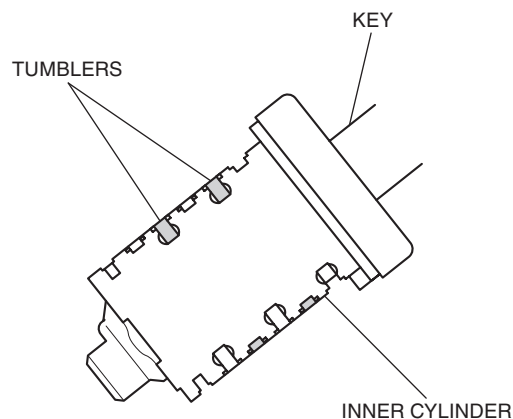

10. Install the tumblers and springs (silver) to the reverse side inner cylinder as shown.


- First install two No.1 tumblers.

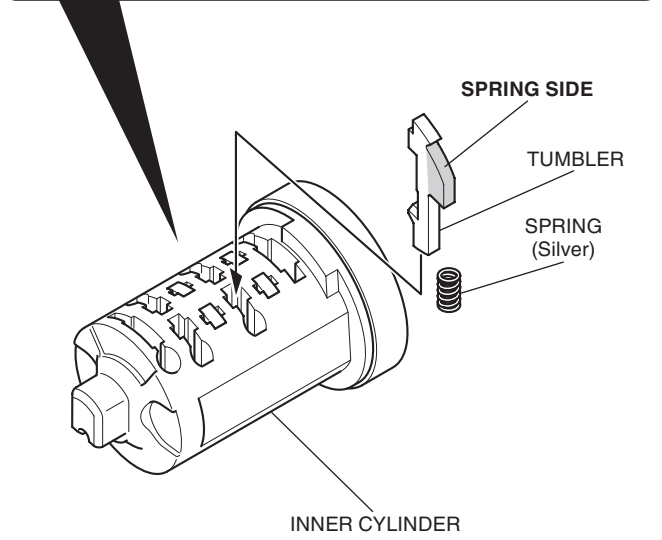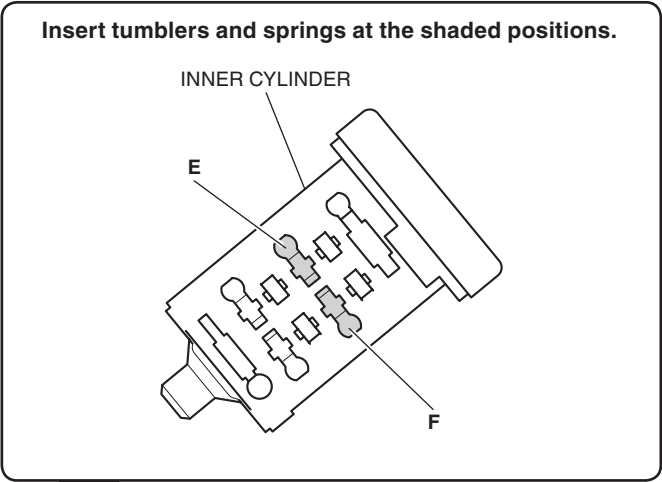



- Note the installed tumbler to below chart.

	Position E	Position F
No.1 tumbler		
No.2 tumbler		
No.3 tumbler		
No.4 tumbler		
No.5 tumbler		
No.6 tumbler		

11. Use steps 4 through 8 to assemble the reverse side inner cylinder in the same manner.

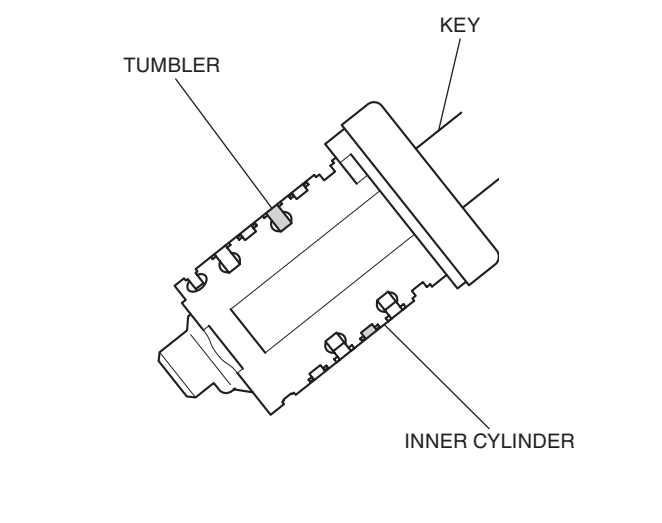

12. Install the sub-lock tumbler as shown.

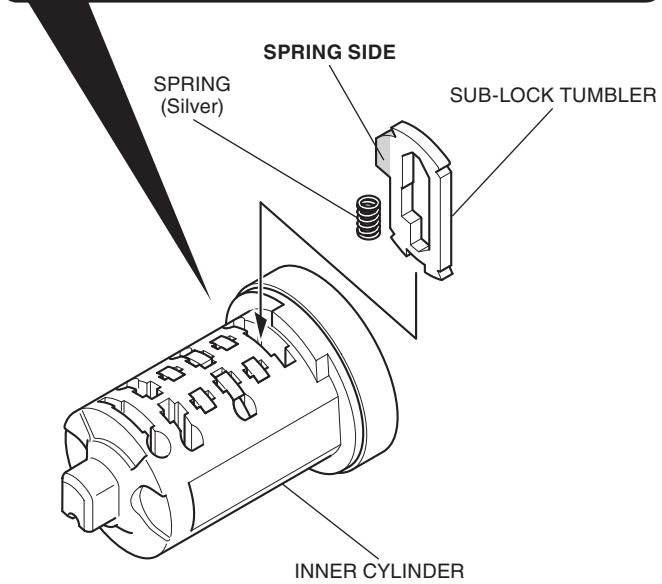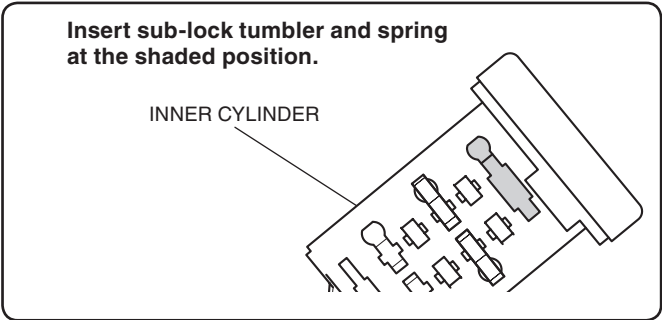


- Note the installed tumbler to below chart.

Sub-lock tumbler A	
Sub-lock tumbler B	


13. Confirm that sub-lock tumbler is not projecting.

- **If the tumbler is projected, change the another sub-lock tumbler and recheck.**

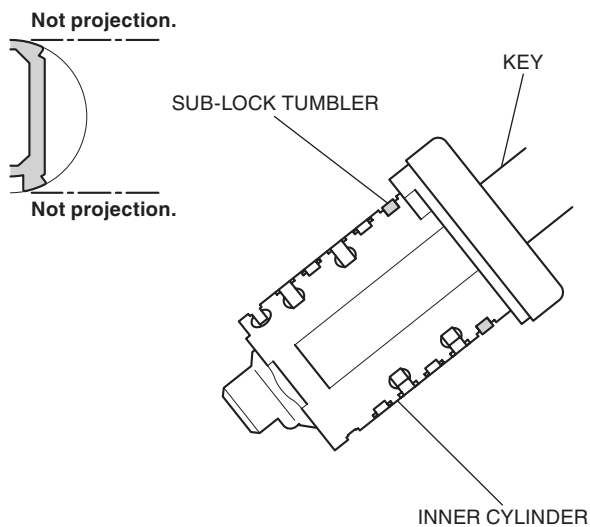

14. Insert the assembled inner cylinder into the body as shown.


- **Confirm the inner cylinder turns clockwise smoothly.**

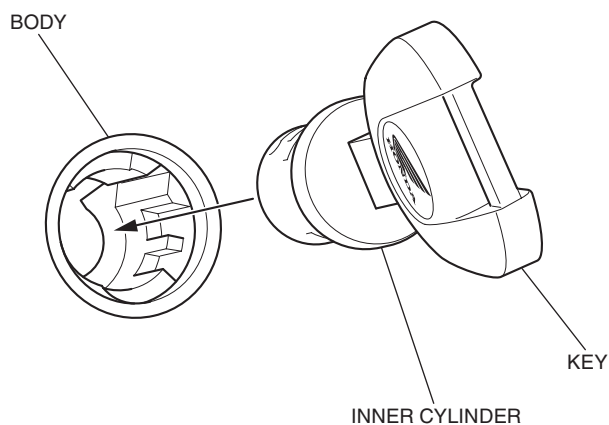

15. Pull out the inner cylinder.


16. Press down lightly on the tumblers and pull out the key.

17. Install the stopper tumbler and stopper spring (black) as shown.

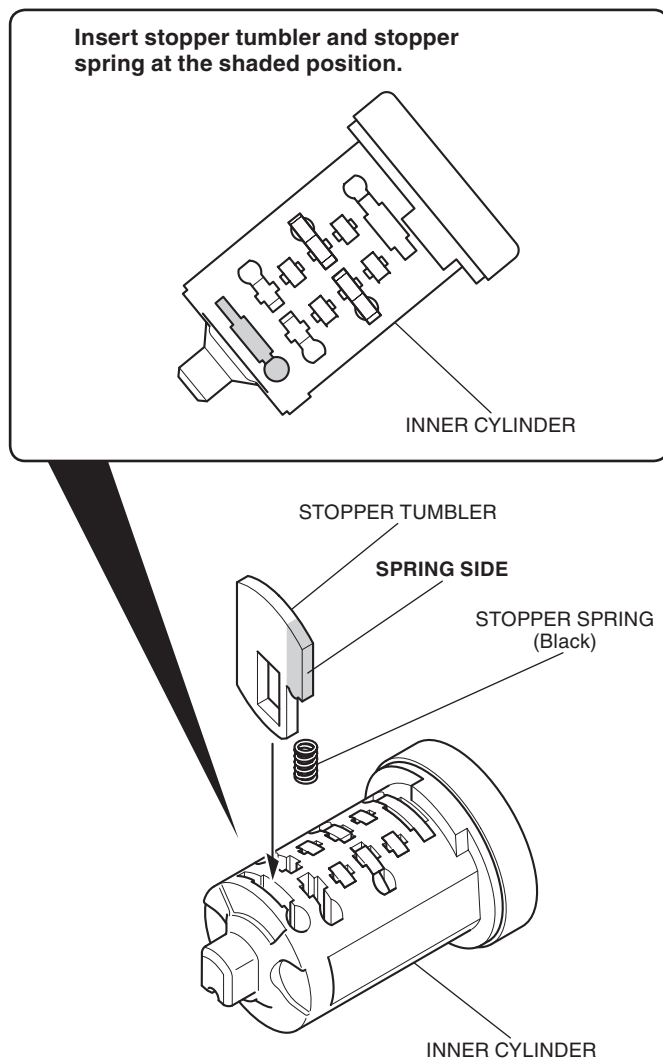


18. Insert the key as shown.

- **Lightly press down on the tumblers from above, then insert the key.**
- **Confirm that the stopper tumbler jumps out.**

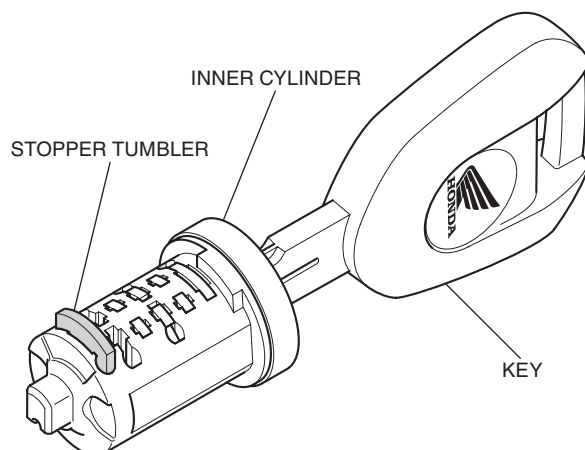



19. Apply grease to the shaded areas as shown.

- **Apply to the tumbler and to the outer circumference of the inner cylinder.**
- **Only use the supplied grease.**

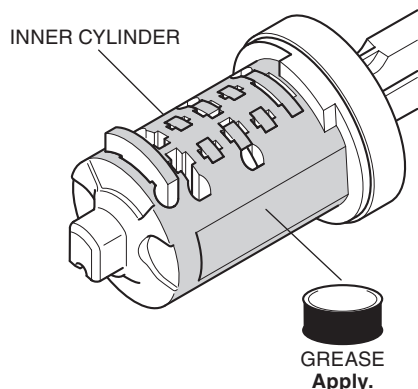

20. Install the inner cylinder by sliding the stopper tumbler along the slide guide while rotating it.

- **If the inner cylinder cannot be inserted, again confirm that no tumblers other than the stopper tumbler have jumped out.**

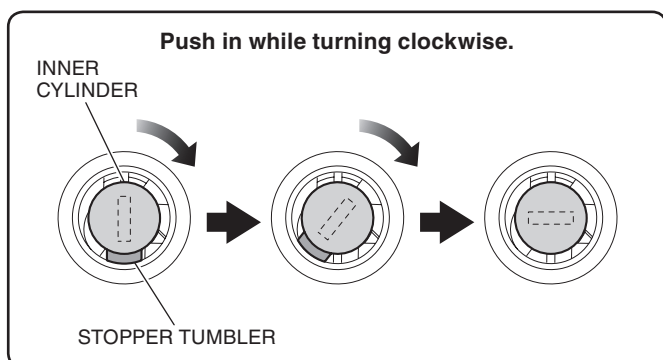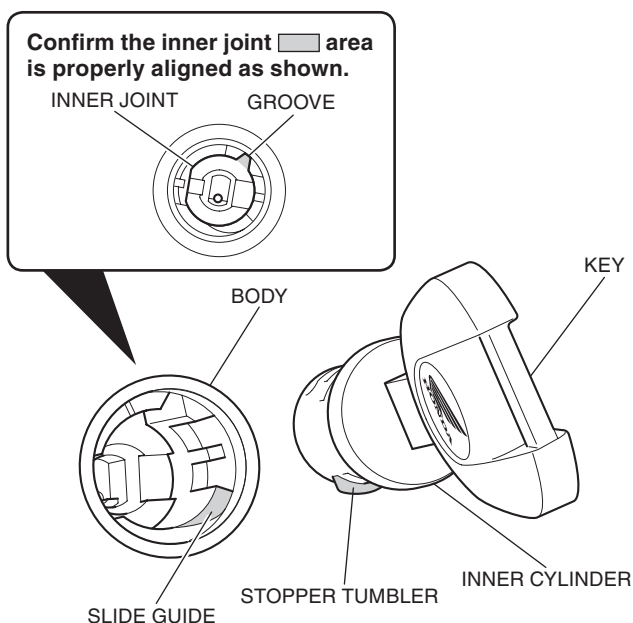

21. Draw out the key and check that the inner cylinder does not come out.

22. Install the inner cylinder to other body in the same manner.

FOR USE OF THE PANNIERS

⚠ CAUTION



- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing and removing the accessory.

How to Open the Panniers


1. Pull the lid lever up as shown.

Insert the key and release the lock by turning the key counter-clockwise.

KEY
Open.

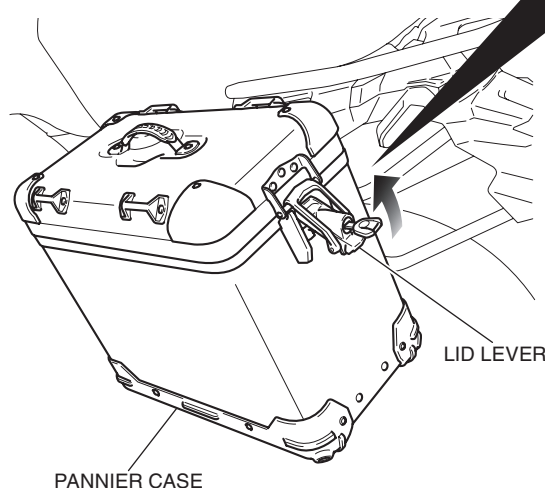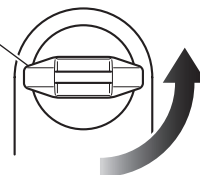

2. Release the lid lock from hook as shown and open the lid.

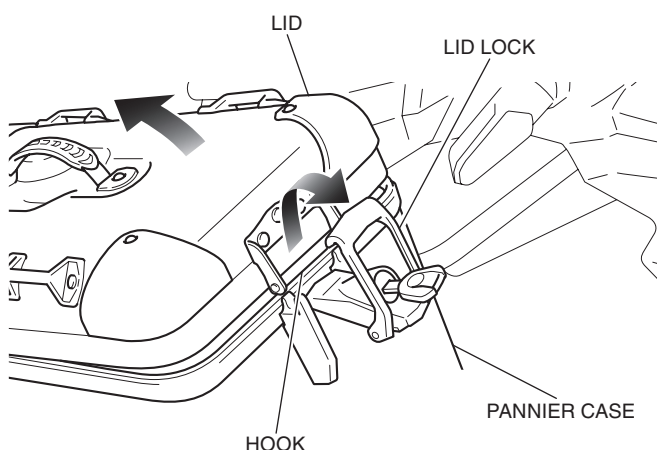


How to Close the Panniers


1. Close and lock the panner case in reverse order of opening.

How to Install the Panniers

1. Install the separately sold pannier stay.
2. Insert the key as shown release the lock by turning the key counter-clockwise.

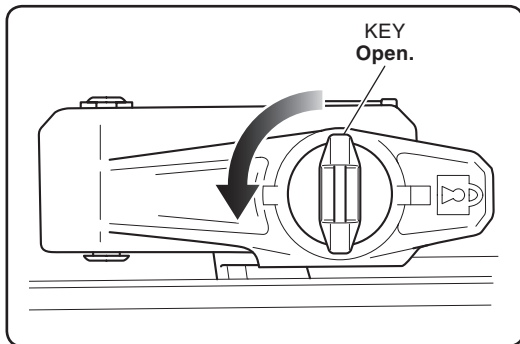


LEFT PANNIER CASE


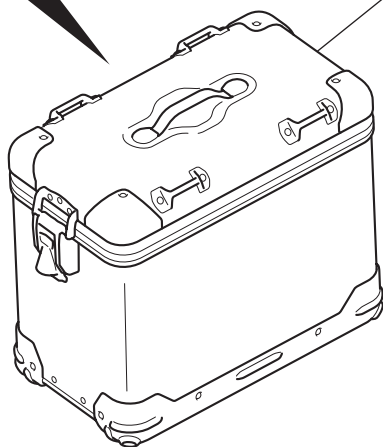


3. Install the left pannier case as shown.
 - **First install the lower side, then install the upper side.**

<Left side>

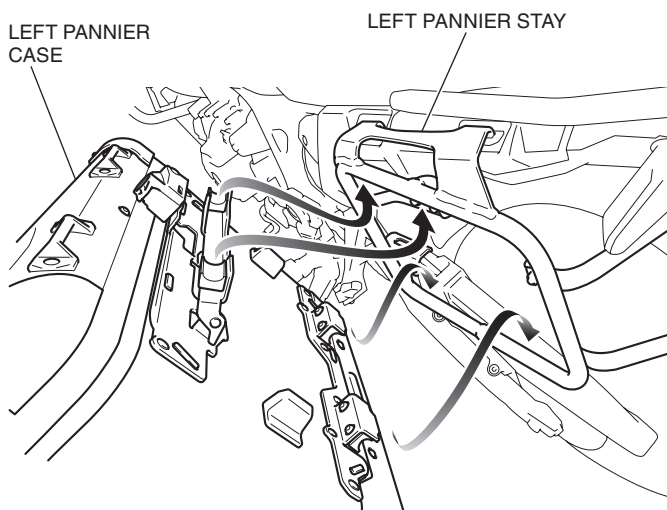


4. Check the align with the mark, and lock with the key.

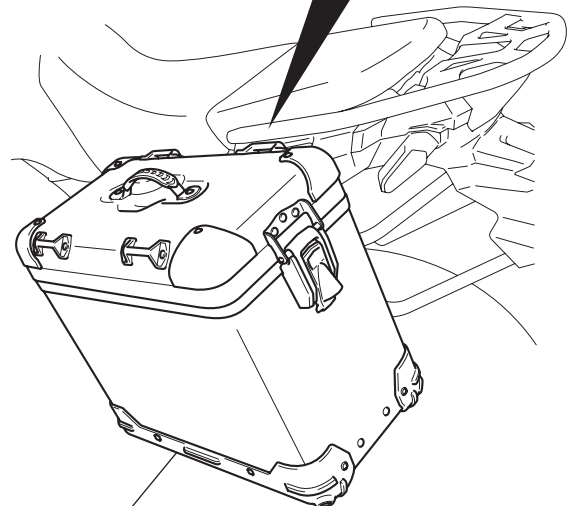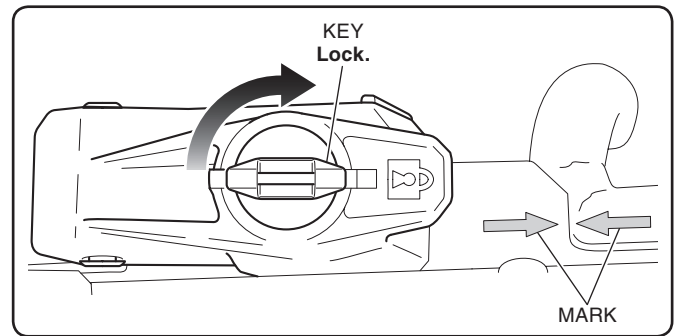

LEFT PANNIER CASE

5. Remove the key. Be sure that the lever cannot be released and the pannier is installed securely.
 - **The pannier can come off during riding unless it is mounted securely.**


LEVER

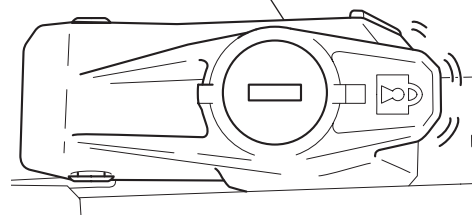

6. Install the right pannier case in the same manner as the left side.

How to Remove the Panniers

1. Pull the lever up as shown.

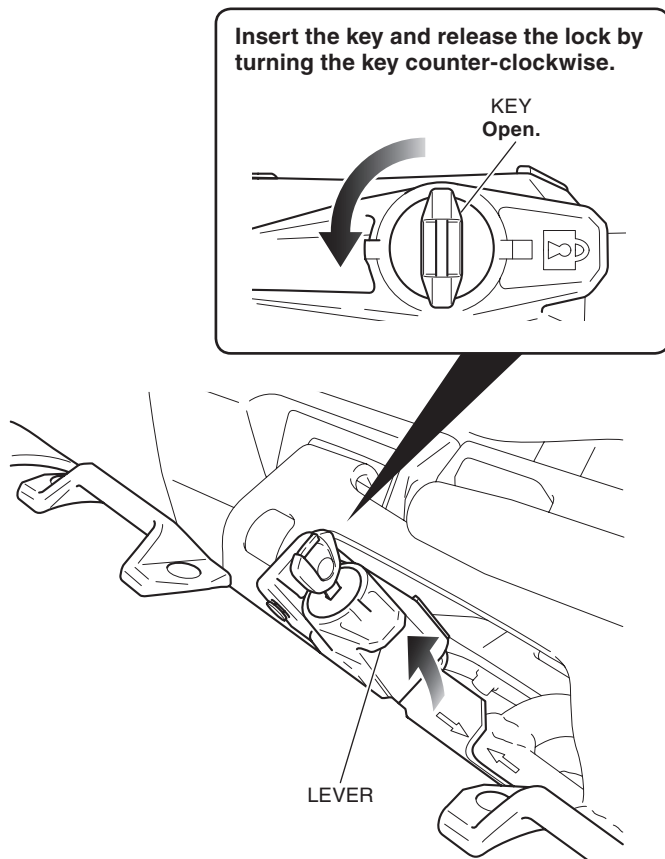

2. Remove the panniers in the reverse order of installation.