

Kriega® OS-32 SOFT PANNIER FITTING INSTRUCTIONS

PANNIER FRAMES

To fit the Kriega OS-32 the bike MUST have pannier frames fitted. These are model specific, available as accessories from bike manufacturers or other after market suppliers. including: Touratech, SW-Motech, Hepco & Becker, Givi, Rallyraid Products, Shift Manufacturing and Metal Mule.



RALLYRAID PRODUCTS - KTM 690
(OS-STRAPS FITTING ONLY)



SW-MOTECH - HONDA AFRICA TWIN



SHIFT MANUFACTURING - HUSQVARNA 701

There are 2 options to fit the OS-32 pannier bags to the bike:

1. Traditional 'over the seat' saddlebag format, using OS-STRAPS*
2. Fixing an OS-PLATFORM* to the frame and mounting the OS-32 to the platform.




* Sold separately

KRIEGA FITTING VIDEOS
www.vimeo.com/kriega



OS-STRAPS (sold separately)

Attach the OS-STRAPS to the rear buckle loops on each OS-32 as follows:

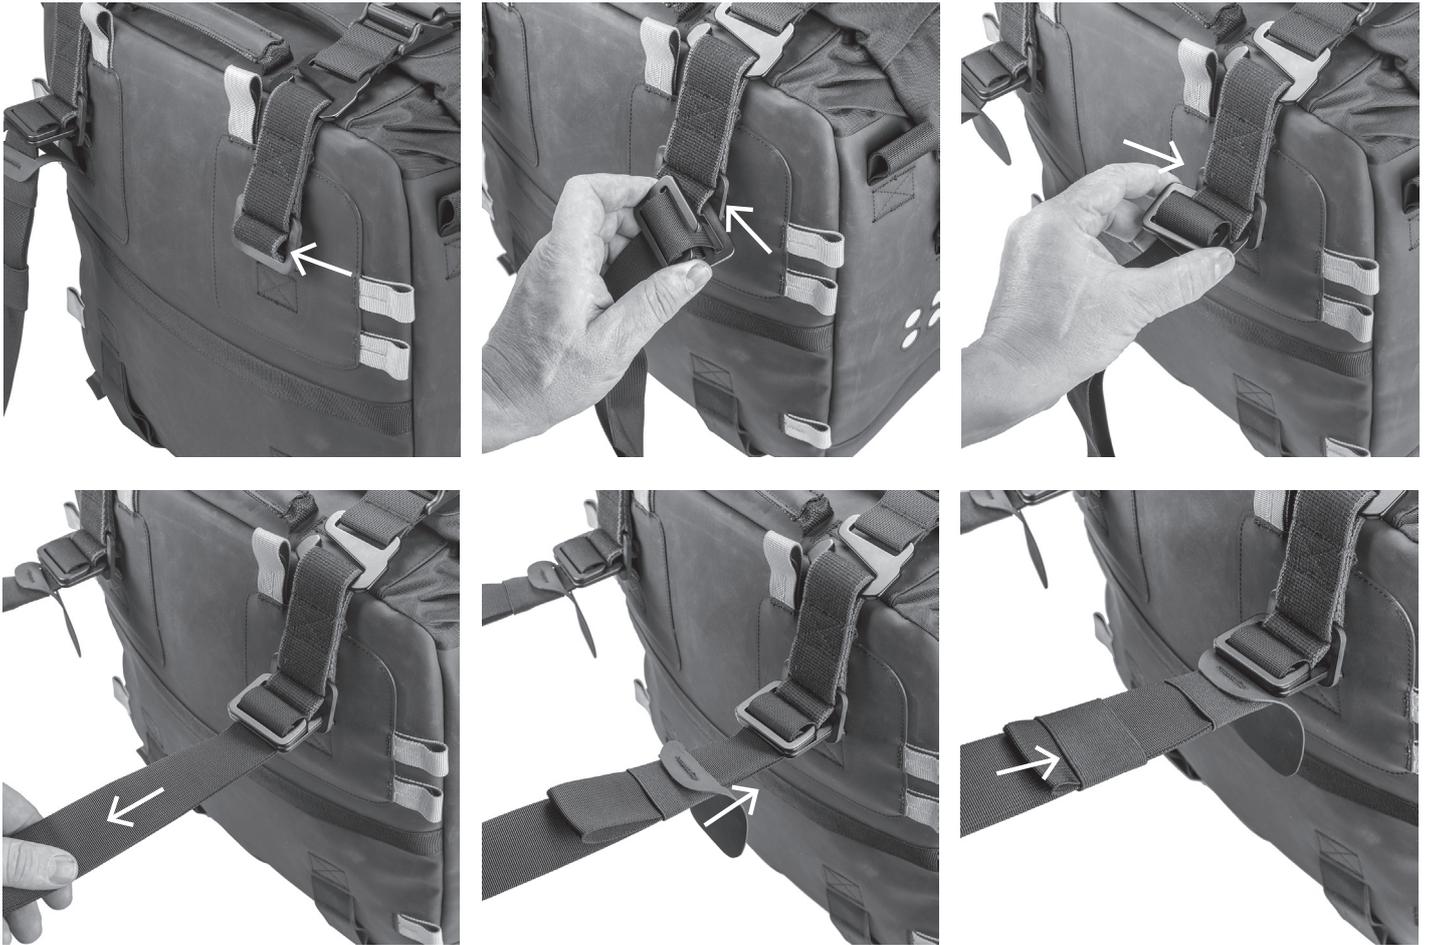

Adjust strap length to suit bike width.



IMPORTANT

Once the bags are mounted across the seat, the OS-32 straps must wrap around the bottom rail of the pannier frame to hold it firmly in position. (see back page)

OS-PLATFORM (sold separately)

Available with 2 fitting options to suit either :


The standard hoop pannier frames with 16mm up to 20mm tubes **A.** or SW-Motech® Evo Carrier **B.**

PLATFORM FITTING

A. Standard hoop pannier frames with 16mm up to 20mm tubes.


The OS-PLATFORM is designed with various clamp mounting holes. 5 clamps are included with the OS-PLATFORM, select 3 mounting positions at the top and 2 at the base. The mounting position illustrated below is a guide, you may need to use the alternative mounting holes depending on the frame design.

NOTE: For tubes 18mm diameter and below, foam spacers are included to be placed between the clamps and the tube.

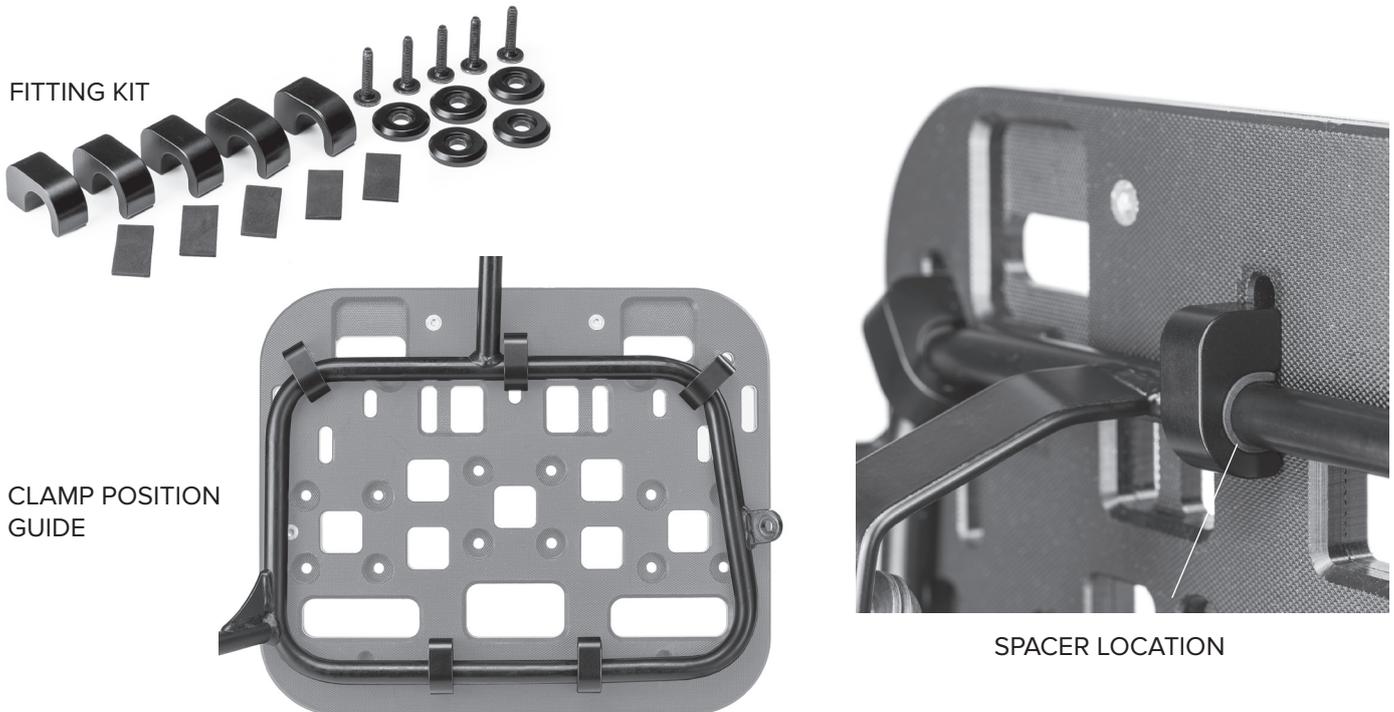

B. SW-Motech® Evo Carrier


Fitting hardware is supplied with each OS-PLATFORM, attach to the Evo Carrier using the 5 sets of fixings as illustrated below.

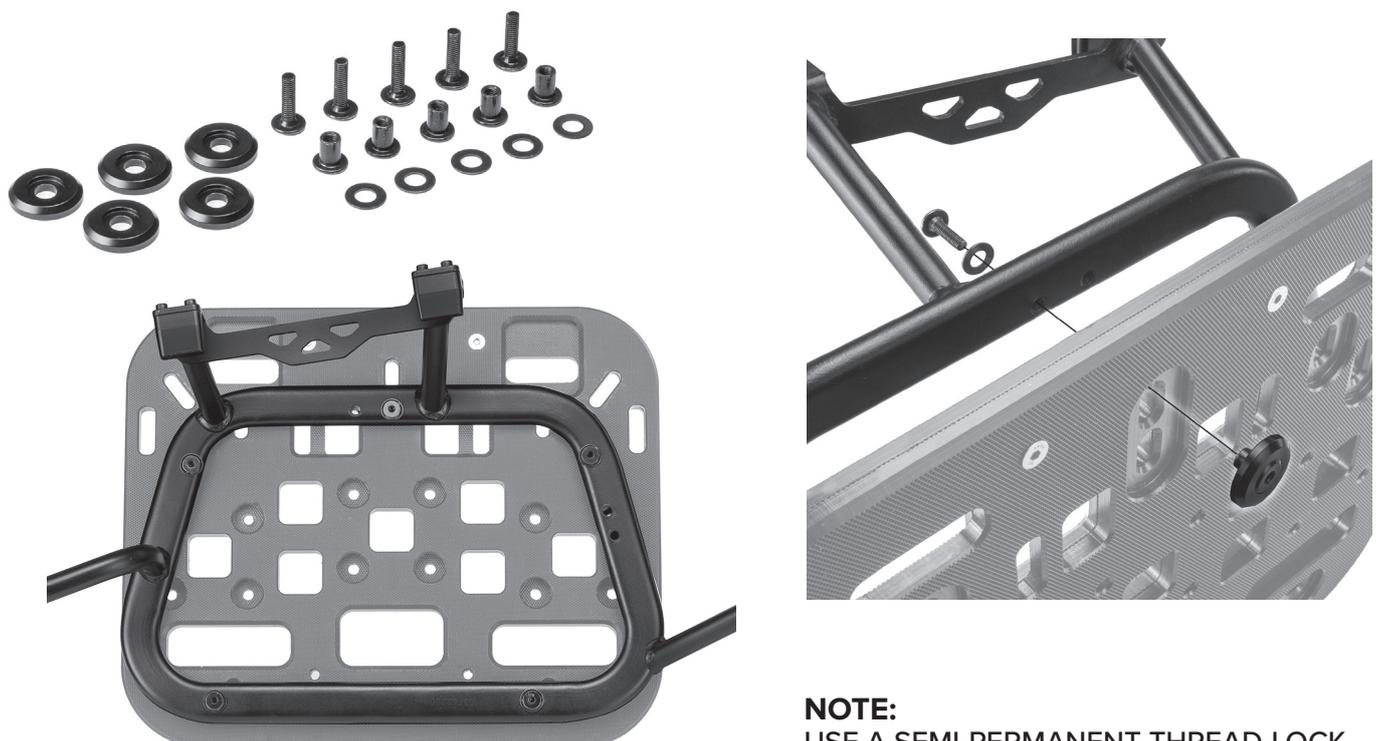

NOTE:
USE A SEMI-PERMANENT THREAD-LOCK
ON ALL FASTENINGS.

FITTING OS-32 TO THE OS-PLATFORM

1. Pass the top straps and alloy buckles through the slots on the OS-PLATFORM and 'click' them into position. This will hold the weight of the pack while you pass the bottom straps through the slots at the base of the OS-PLATFORM.
2. Connect the top and bottom strap hooks.
3. Pull the strap upwards to remove any slack from underneath the bag. Then pull the strap through the cam buckle to fully tighten and lock-off the web by pushing the cam lever down.
4. Push the remaining strap down inside the front of the pack. (folding it in two makes this easier)

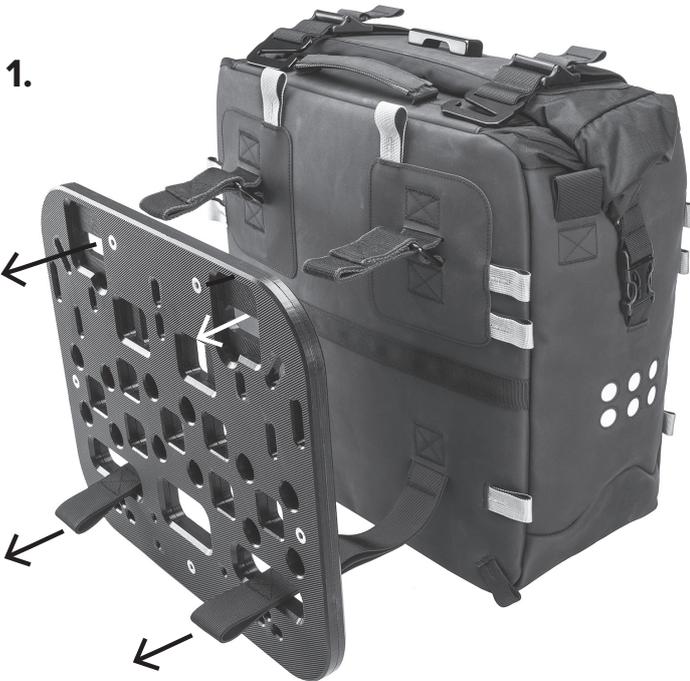

Kriega®

KRIEGA FITTING VIDEOS
www.vimeo.com/kriega



CARE INSTRUCTIONS

The white liner can be easily removed for cleaning.
Both the liner and the main pack can be hand washed in warm water with mild soap.
CAUTION: detergents will damage the waterproof fabric coatings.
DO NOT tumble-dry or place on direct sources of heat.



It is the owner's responsibility to ensure the pannier bags are attached in such a way that they do not damage or put at risk the owner or the property of the owner or a third party. Do not exceed the UK legal speed limit. This product has only been tested for up to UK road legal speeds.